


SATORI F3J

setup 2010

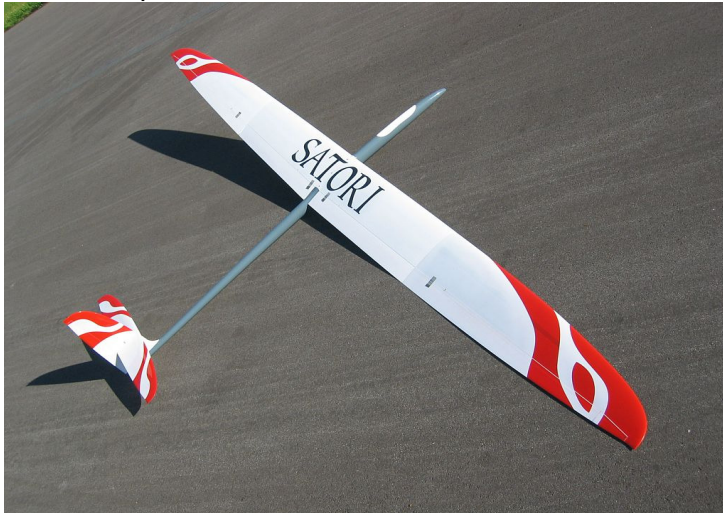

		launch/Start	normal	thermal1	thermal2	distance/Strecke	Butterfly	
aileron up	QR oben	20	20	20	20	20		
aileron down	QR unten	0	10	9	0	10		
elevator up	HLW hoch	11	15	13	10	16		
elevator down	HLW tief	15	16	15	15	16		
rudder	SR	25	25	25	25	25		
ail-rudder-mix	Combiswitch	5	4	4	4	0		
camber	Wölbung	6	0	3	5	1,5(up/oben)		
elevator-mix	trimmung	trim elevator HLW-trimmung anpassen!						
aileron up	QR oben						7	
flaps down	WK unten						max.	
elevator down	Tiefenrudder						9,5	

Schwerpunkt Modell: 105-107mm
CofG

Höhenrudder Neutralstellung
Elevator neutral: 100-101mm

